
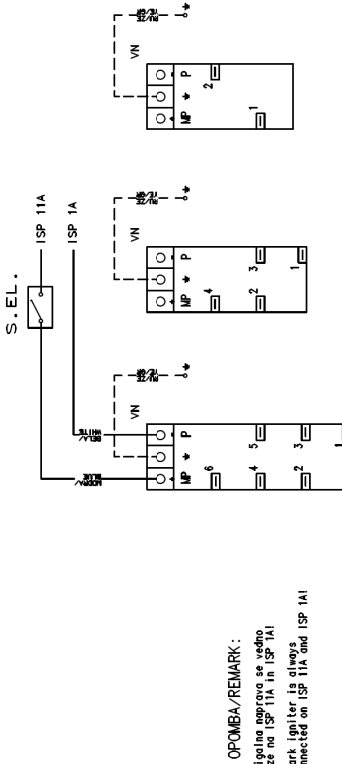


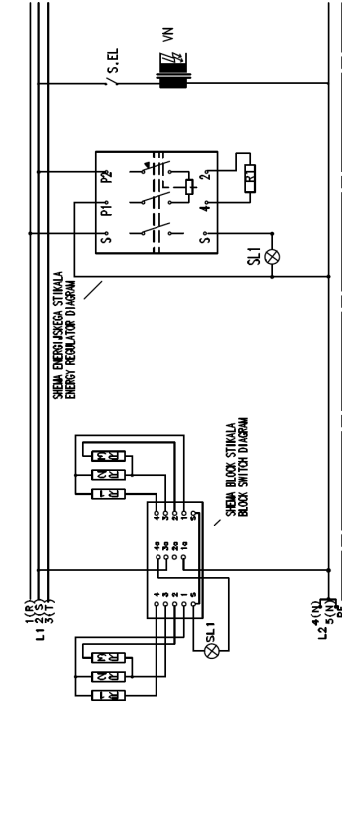


OPOMBA/REMARK:
Vzignala naprava se vedno
veze na ISP 11A in ISP 1A!
Spark igniter is always
connected on ISP 11A and ISP 1A!

VZIGALNA NAPRAVA/
SPARK IGNITER
ISPRACUNTI 1-2

VZIGALNA NAPRAVA/
SPARK IGNITER
ISPRACUNTI 1-4

VZIGALNA NAPRAVA/
SPARK IGNITER
ISPRACUNTI 1-6

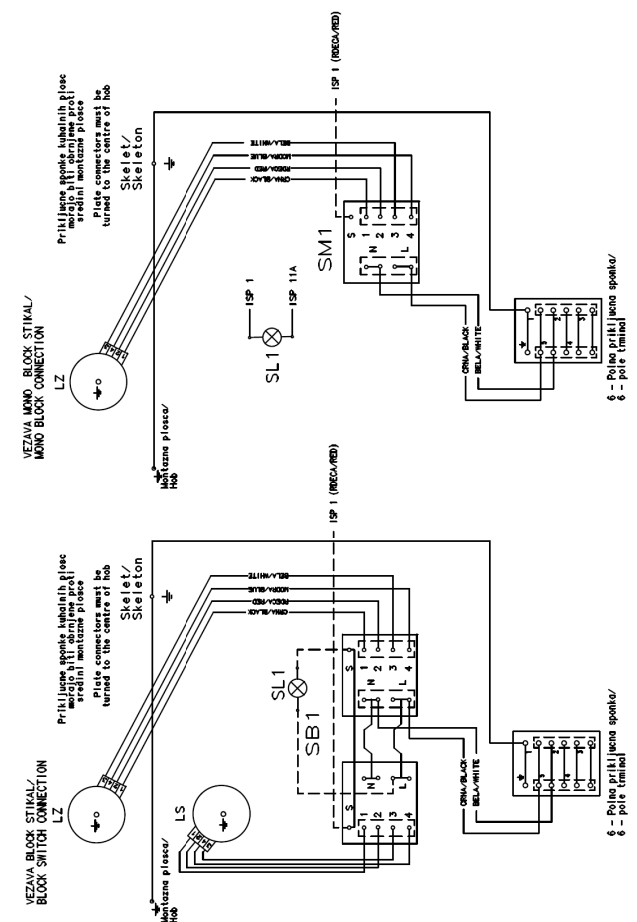

OPREMA KUHALISC NG 602/ EQUIPMENT OF HOBS NG 602					
OZNAKA MARKING OF HOBS	LS	LZ	DZ	DS	
A	145B	180B	H	B	
B	A	180B	H	B	
C	A	180B	H	D	
D	A	A	H	B	
E	A	A	H	D	
T	145HL	180HL	B	A1	

OPREMA KUHALISC NG 500/ EQUIPMENT OF HOBS NG 500					
OZNAKA MARKING OF HOBS	LS	LZ	DZ	DS	
A	145	180B	H	B	
B	145	180	H	B	
C	A	145B	H	B	
D	A	145	H	B	

POZ.	OPREMA/ MARK	NAZIV/TITLE
1	SM	STIKALO MANI BLOK / MANI BLOCK SWITCH
2	SB	BLOK STIKALO / BLOCK SWITCH
3	SL	STIKALO ILOKA (RUMEN) / SIGNAL LAMP (YELLOW)
4	SE	STIKALO ILOKA (RUMEN) / SIGNAL LAMP (YELLOW)
5	SL	STIKALO ILOKA (RUMEN) / SIGNAL LAMP (YELLOW)
6	SE	STIKALO ILOKA (RUMEN) / SIGNAL LAMP (YELLOW)
7	SE	STIKALO ILOKA (RUMEN) / SIGNAL LAMP (YELLOW)